



Freestyle Keys for X701D-F/ X901D-F

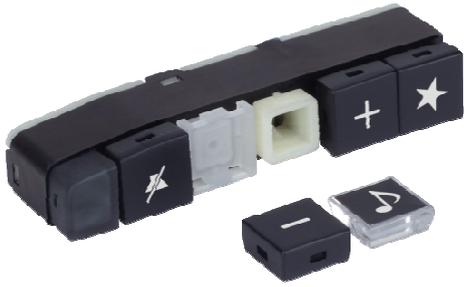

Removal of Key Caps

The Key caps can be removed to allow either horizontal or vertical installation. Since the *Mute* and *Menu* key are not square, you will find 2 spare key caps with horizontal print.

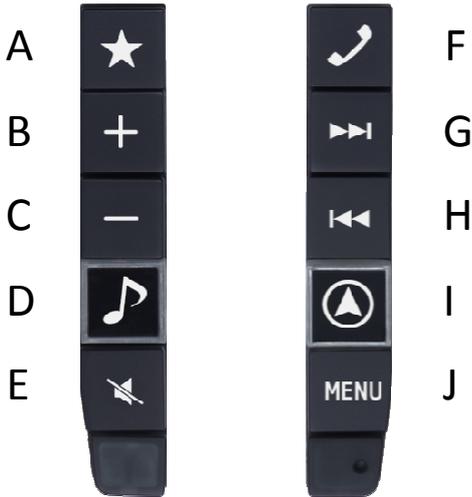

Flexible Key Mapping


The mapping of the keys can be assigned to the driver's needs within the limitations of the physical shape of the key caps.

Keys A, B, C, F, G, H can be interchanged

Keys D and I can be interchanged

Keys E and J can be mapped differently, but the shape does not allow to swap the key cap from left to right.

One application is to swap the volume control from the left to the right for right hand drive cars.

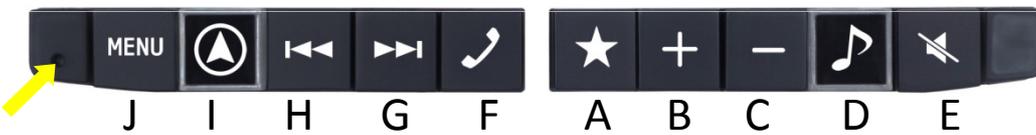

Assign New Key Mapping

Disconnect the black 2 pin connector in the harness that connects the keys to the main unit. Push and hold the two keys near the reset hole (keys I and J in this image) for 1 second. To assign the keys, each key needs to be pressed for 1 second. First key pressed will become the Favorites (★) Key, second key pressed will become the *Volume up* key. Please see table for the complete sequence. Once the last key was mapped, reconnect the black 2 pin connector and check the configuration.



Sequence of Keys

1. Favorites	6. Phone
2. Volume Up	7. Seek Up
3. Volume Down	8. Seek Down
4. Audio	9. Nav
5. Mute	10. Menu

Changing the Illumination Color

12 illumination presets are available to choose from. See table for details. To toggle the colors, push keys FAV(★), VOL=, Mute simultaneously. Repeat until desired color is selected.

Color Presets

1. Red	6. Green (dim)
2. Red (dim)	7. Orange
3. Blue	8. Orange (dim)
4. Blue (dim)	9. Yellow
5. Green	10. Yellow (dim)
	11. White
	12. White (dim)